

**TB 45**Temperature limiter / monitor

Compact design
Suitable for heating and refrigeration processes
For all thermocouple types and resistive sensors
Display & operating functions
Communication functions
Two relay outputs
Analog output
Two universal inputs
Reset via front key combination / external contact
Type-tested to DIN 3440 / EN 14597

## **FEATURES**

- Configurable as limiter, monitor, or limit signaller
- Compact design, only 22.5 mm wide
- Clips onto top-hat DIN rail
- Plug-in screw terminals or spring-clamp connectors
- Dual-line LC display with additional display elements
- Convenient 3-key operation
- Communication via bus connector fitted in top-hat rail
- ➤ BluePort<sup>®</sup>front interface
- > Two universal inputs
- > Two relay outputs
- > Two pre-alarms
- Universal output for display values

## **APPLICATIONS**

- All plants, in which an exceeded min/max temperature limit can cause serious damage.
- Heating system in buildings to DIN EN 12828
- Large hot-water boilers to DIN EN 12953-6
- Thermal transfer plants with organic heat transfer media to DIN 4754
- Oil-fired installations to DIN 4755

 Limit signalling function for any type of input signal

ψ...

## **DESCRIPTION**

The temperature limiter TB 45 is intended for precise, cost-effective signal monitoring & limiting tasks.

Every TB 45 is fitted with at least one universal input and two output relays.

Optionally, the TB 45 can be supplied with an analog output for display purposes.

Galvanic isolation is provided between inputs and outputs as well as from the supply voltage and the communication interfaces.

## Mounting

The compact TB 45 is clipped onto a top-hat DIN rail, and can also be unmounted very simply.

All connections are of the plug-in type, so that a device can be replaced very quickly without disturbing the wiring.

## Display and operation

The dual-line LC display permits simultaneous indication of the measured value and all of the unit's operating functions.

Moreover, a LED and 4 other display elements give a reliable indication of operating status, operating mode, and error messages.

The user-configurable engineering unit of the measured value can be included in the display. By means of the extended Operating Level, it is possible to show any signal or parameter in the 2nd display line.

## Interfaces and Engineering Tools

The limiter's settings are also configurable by means of an Engineering Tool.

Via the BlueControl software (which includes a limiter simulation), and especially the convenient connection via the BluePort front interface, the user can solve the task in hand without having to work through operating instructions.

Of course, practically all settings can also be made from the device front.

Moreover, the TB 45 can exchange data with superordinate PLCs and PCs via an optional RS 485 interface with Modbus RTU protocol that is fitted into the top-hat DIN rail.

Devices with option system interface can be connected to fieldbus coupler of the *rail line* series.

## Password protection

Unauthorized access to the limit settings and the Operating Levels is prevented with a password.

## **TECHNICAL DATA**

## **INPUTS**

## Survey of inputs

Input	Purpose
INP1	X1 (process value 1), universal input
INP2 (Option)	X2 (process value 2), universal input; input for additional limit monitoring and display
di1	Operation disabled; Reset of stored alarms

## UNIVERSAL INPUT INP1

Type: single-ended, except thermocouples

Resolution: > 14 bits
Decimal point: 0 to 3 decimals
Digital input filter: adjustable 0.0...999.9 s

Scanning cycle: 100 ms

Linearization: 15 segments, adaptable

with BlueControl®

Measurement value

ue 2-point or offset

correction:

## Thermocouples (Table 1)

Input resistance:  $\geq 1 \text{ M}\Omega$ Influence of source  $1 \mu V/\Omega$ 

resistance:

Input circuit monitor break, reversed polarity

## Cold-junction compensation

Internal

- additional error:

typical:  $\leq \pm 0.5 \text{ K}$ max.:  $\leq \pm 1.2 \text{ K}$ 

External 0...100 °C

## Break monitoring

Sensor current:  $\leq 1 \,\mu\text{A}$ 

Operating sense configurable

#### Resistive sensors (Table 2)

Connection technique: 3-wire or

4-wire (not available if

using INP2)

Lead resistance

max. 30  $\Omega$ 

(for max. span):

Input circuit monitoring: break and short circuit

## Measurement span

separated into ranges

Physical measurement range: 0...4,500  $\Omega$ 

The BlueControl® software enables the internal characteristic curve for the KTY 11-6 temperature sensor to be adapted.

# Current and voltage measurement (Table 3)

Span start and span: anywhere within the

measurement range

Scaling: freely selectable

-1,999...9,999

Table 1: Thermocouple input

Thern	nocouple type	Measurer	ment range			Accuracy	Typical resol.
L	Fe-CuNi (DIN)	-100	900°C	-148	1,652°F	≤ 2K	0.1 K
J	Fe-CuNi	-100	1,200°C	-148	2,192°F	≤ 2K	0.1 K
K	NiCr-Ni	-100	1,350°C	-148	2,462°F	≤ 2K	0.2 K
N	Nicrosil/Nisil	-100	1,300°C	-148	2,372°F	≤ 2K	0.2 K
S	PtRh-Pt 10%	0	1,760°C	32	3,200°F	≤ 2K	0.2 K
R	PtRh-Pt 13%	0	1,760°C	32	3,200°F	≤ 2K	0.2 K
T**	Cu-CuNi	-200	400°C	-328	752°F	≤ 2K	0.05 K
С	W5%Re-W26%Re	0	2,315°C	32	4,199°F	≤3K	0.4 K
D	W3%Re-W25%Re	0	2,315°C	32	4,199°F	≤ 3K	0.4 K
Е	NiCr-CuNi	-100	1,000°C	-148	1,832°F	≤ 2K	0.1 K
B*	PtRh-Pt6%	0(400)	1,820°C	32(752)	3,308°F	≤3K	0.3 K
Spec	ial		-25	+75 mV		≤ 0.1%	0.01%

<sup>\*</sup> Values apply from 400 °C upwards

Table 2: Resistive inputs

Туре	Sensor current	Measurement range			Accuracy	Typical resol.	
Pt100 ***		-200 10	0(150)°C	-328 2		≤1 K	0.1 K
Pt100		-200	850°C	-328	1,562°F	≤1 K	0.1 K
Pt1000		-200	850°C	-328	1,562°F	≤2 K	0.1 K
KTY 11-6*		-50	150°C	-58	302°F	≤2 K	0.1 K
Special	- 0.2F A		04	4,500 <b>Ω</b> **		≤ 0.1%	0.01%
Special	≤ 0.25 mA		0	.450 Ω**		≤ 0.1%	0.01%
Potentiom.			0	.160 Ω**		≤ 0.1%	0.01%
Potentiom.			$0450\mathbf{\Omega}^{**}$			≤ 0.1%	0.01%
Poti		01,600 <b>Ω</b> **			≤ 0.1%	0.01%	
Poti		04,500 <b>Ω</b> **			≤ 0.1%	0.01%	

<sup>\*</sup> Default setting is the characteristic for KTY 11-6 (-50...150°C)

Table 3: Current and voltage input

Measurement range	Input resistance	Accuracy	Typical resol.
0 20 mA	20 Ω	≤ 0.1 %	1,5 μΑ
0 10 V	≈ 110 kΩ	≤ 0.1 %	0,6 mV
-10 10 V	≈ 110 kΩ	≤ 0.1 %	1,2 mV
-5 5 V	≈ 110 kΩ	≤ 0.1 %	0,6 mV
-2,5 115 mV*	> 1 MΩ	≤ 0.1 %	6 μV
-25 1,150 mV*	> 1 MΩ	≤ 0.1 %	60 μV
-25 90 mV*	> 1 MΩ	≤ 0.1 %	8 μV
-500 500 mV*	> 1 MΩ	≤ 0.1 %	80 μV
-200 200 mV*	> 1 MΩ	≤ 0.1 %	40 μV

<sup>\*</sup> For INP1: high-impedance, without break monitoring for INP2: high impedance, break monitoring always active

12.5% below span start

## O<sub>2</sub>- measuring (option)

Input circuit

monitoring (current):

EMI-measuring by means of INP1 (high-impedance mV-inputs) suitable for probes with

- constant sensor temperature (heated probes), setting by means of parameter
- measured sensor temperature (non-heated probes), measuring by means of INP2

## ADDITIONAL INPUT INP2 (UNIVERSAL, OPTIONAL)

Resolution: > 14 bits

Digital input filter: adjustable 0.0...999.9 s

Scanning cycle: 100 ms
Linearization: as for INP1
Measurement value 2-point or offset

correction:

Type: single-ended except thermocouples

2 TB 45

<sup>\*\*</sup>Values apply from -80°C upwards

<sup>\*\*</sup> Including lead resistance

#### Thermocouples (Table 1)

#### Cold-junction compensation

Internal

- additional error:

typical:  $\leq \pm 0.5 \text{ K}$ max.:  $\leq -2.5 \text{ K}$ 

External 0...100 °C

Remaining technical data as for INP1.

## Resistive sensors (Table 2)

Connection technique: 3-wire

#### Measurement span

Remaining technical data as for INP1.

# Current and voltage measurement (Table 3)

Remaining technical data as for INP1 except:

- Voltage input ranges –10...0...+10V and -5...+5V not possible.
- Millivolt input ranges: break monitoring always active.

## **CONTROL INPUT DI1 (RESET)**

Configurable as direct or inverse switch or **push button!** 

## Contact input

Connection of potential-free contact that is suitable for switching 'dry' circuits.

Switched voltage: 5 V Switched current: 1 mA

## Optocoupler input

Actively switched optocoupler input

Nominal voltage: 24 V DC external Logic "0": -3 V...+5 V Logic "1": 15 V...30 V Current demand: max. 6 mA

## **OUTPUTS**

## SURVEY OF OUTPUTS

Output	Purpose
LC (relay)	Limit contact, alarms *
OUT2 (relay)	Limit contact, alarms, errors *
OUT3 (logic, option)	Same as OUT2
OUT3 (continuous, option)	Analog output (display value, Inp1, Inp2), Transmitter supply

<sup>\*</sup> All logic signals can be "OR-linked".

## RELAY OUTPUTS LC, OUT2

Type: 2 NO contacts with a common terminal

Max. contact rating: 500 VA, 250 VAC, 2A at 48...62 Hz, resistive load 6V, 1 mA DC

rating:

Switching for I=1A/2A:  $\geq$  800,000/500,000 cycles (at 250VAC, resistive load) (electrical):

#### Note:

If the relays OUT1 and OUT2 operate external contactors, these must be fitted with RC snubber circuits to manufacturer specifications to prevent excessive voltage peaks at switch-off.

## OUT3 AS UNIVERSAL OUTPUT (OPTION)

Galvanically isolated from the inputs. Parallel current/voltage output with common 'minus' terminal (combined use only in galvanically isolated circuits).

Freely scalable

Resolution: 14 bits
Tracking error I/U:  $\leq$  2 %
Residual ripple: (referred to end of span)  $\leq$  14 bits  $\leq$  2 %
0...130 kHz

#### Current output

0/4...20 mA, configurable short-circuit proof

 $\begin{array}{ll} \text{Control range:} & -0.5...23 \text{ mA} \\ \text{Load:} & \leq 700 \ \Omega \\ \text{Load effect:} & \leq 0.02\% \\ \text{Resolution:} & \leq 1.5 \ \mu\text{A} \\ \text{Error:} & \leq 0.1\% \end{array}$ 

## Voltage output

0/2...10V, configurable

not continuously short-circuit proof

 $\begin{array}{lll} \text{Control range:} & -0.15...11.5 \text{ V} \\ \text{Load:} & \geq 2 \text{ k} \pmb{\Omega} \\ \text{Load effect:} & \leq 0.06\% \\ \text{Resolution:} & \leq 0.75 \text{ mV} \\ \text{Error:} & \leq 0.1\% \\ \text{Additional error with} & \leq 0.09\% \\ \text{simultaneous use of} & \end{array}$ 

current output

# OUT3 as transmitter supply

Output:  $22 \text{ mA} / \ge 13 \text{ V}$ 

## OUT3 as logic signal

 $\label{eq:load_sigma} \begin{array}{ll} \mbox{Load} \leq 700 \ \Omega & \mbox{O/$\le$ 23 mA} \\ \mbox{Load} > 500 \ \Omega & \mbox{O/$>$ 13 V} \end{array}$ 

# GALVANIC ISOLATION (FIG. 1)

Galvanic isolation is provided between inputs and outputs as well as from the supply voltage (3-port-isolation). Test voltage:

Between power supply and 2.3 kV AC, 1 min

in-/outputs:


Between input and output: 500 V AC: 1min

Isolation:

between in-/output against ≤ 33 V AC

earth:

Fig.1: galvanic isolation

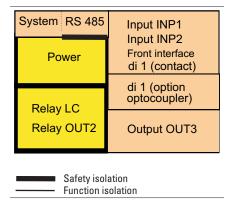

## **FUNCTIONS**

## LC RELAY OUTPUT

Interruption of the power supply if the upper or lower limit for the process value is exceeded.

Possible operation as:

#### Limiter

- Switch-off if a limit is exceeded
- Output is re-enabled when the process value is within limits again (incl. hysteresis), and the electronic latch has been released manually via the reset function.

#### Monitor

- Switch-off if a limit is exceeded
- Output is re-enabled automatically when the process value is within limits again (incl. hysteresis).

## Limit signaller

Limit signalling function (see below)

## Process value settings:

INP1, optional difference INP1-INP2, MAX/MIN (INP1, INP2),  ${\rm O}_2$  measurement.

TB 45 3

# OTHER LIMIT SIGNALLING FUNCTIONS

MAX, MIN or MAX+MIN monitoring with adjustable hysteresis 2 additional alarms available.

#### Monitored signals

- Process value (absolute)
- Difference to limit contact LC (relative)
- Input 1
- Input 2

## **Functions**

- Input circuit monitoring
- Input circuit monitoring with latching

Several limit and alarm signals can be "OR-linked" for output.

## **ALARMS**

Sensor break/short circuit
Depending on the selected input type,
the input circuit is monitored for break,
short circuit, and reversed polarity.
Behaviour on sensor break / short circuit

 Response of the analog output is selectable (upscale / downscale)

## SIGNAL LINKING (OPTION)

Additional combinations if INP2 is fitted:

- Difference INP1 INP2
- Max. value selection INP1, INP2
- Min- value selection INP1, INP2
- O<sub>2</sub> measurement with constant sensor temperature (INP1: mV input)\*
- O<sub>2</sub> measurement with measured sensor temperature (INP1: mV input, INP2: temperature input)\*
- \* Precise calculation using Nernst equation.

## **DISPLAY AND OPERATION**

## Display

# LCD

dual-line plus additional display elements

## Upper line

4 digits, 7 segments for:

- Process value
- Limit value of LC


## Lower line

4

5 digits, 14 segments; configurable contents (via BlueControl®)

Engineering unit

Fig. 2: Connections TB 45

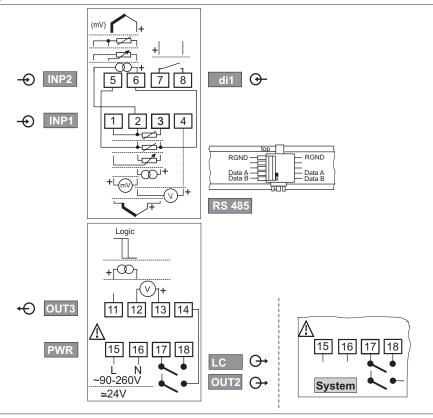

- Parameters
- Extended Operating Level

## Additional display elements

4 display elements (bars in the lower line of the LCD)

- Identifiers 1 & 2 : LC/OUT2 active
- Identifier TB: Adjusted function as temperature limiter.
- Identifier E: Entry has been made in the error list

## LED

## Dual-colour

- Green: OK
- Green, blinking: no data exchange with bus coupler (only for devices with system option)
- Red: limit value Lim1/LC exceeded
- Red, blinking: internal fault

## **Operating functions**

Only three keys at the front of the TB 45 are used to operate process values, parameters, and configuration data. Different Operating Levels and selected parameters can be disabled by means of BlueControl .

**TB 45** 

#### MAINTENANCE MANAGER

Display of error messages, warnings, and stored limit value messages in the error list. Messages are stored, and can be reset manually.

Possible elements in the error list:

Sensor break, short circuit, incorrect polarity

Stored limit values

e.g. re-calibration warning (message is generated when a predefined operating time is reached)

e.g. maintenance interval for a switching device (message is generated when a predefined number of switching cycles is reached)

Internal fault (RAM, EEPROM, ...)

## **POWER SUPPLY**

Depending on ordered version:

## AC supply

Voltage: 90...260 V AC Frequency: 48...62 Hz Power consumption: approx. 7 VA max.

## Universal supply 24 V UC\*

18...30 V AC AC voltage: 48...62 Hz Frequency: 18...31 V DC DC voltage:

Power consumption: approx. 4 VA / 3W max. Supply only from protective low-voltage sources

(SELV)

\* Devices with system option: They are supplied via the bus connector from bus coupler or power supply module.

## Behaviour with power failure

Configuration and parameter settings: Permanent storage in EEPROM

# BLUEPORT® FRONT INTERFACE

Connection to the transmitter front via a PC adapter (see 'Accessories'). The BlueControl® software enables the TB 45 to be configured, parameters set, and operated.

## **BUS INTERFACE (OPTIONAL)**

## RS 485

Connection via bus connector fitted in the top-hat rail. Screened cables should be used.

Galvanically isolated

RS 485 Type:

Transmission speed: 2,400, 4,800, 9,600,

19,200, 38,400 bits/s

even, odd, none Parity:

Address range: 1...247 Number of devices per

bus segment:

## **PROTOCOL**

the top-hat rail.

MODBUS RTU


## SYSTEM INTERFACE

For connection to fieldbus couplers (see system components) Connection via bus connector fitted in

Technical data see data sheet

9498-737-50913.

Fig. 3: Dimensions

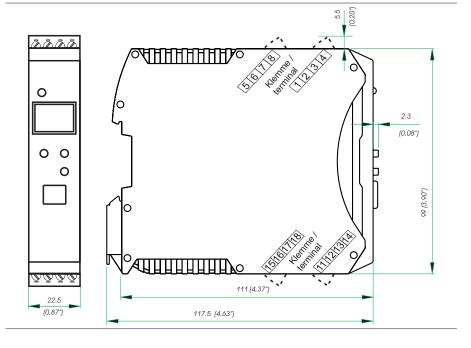

## **ENVIRONMENTAL CONDITIONS**

#### **Protection classes**

IP 20 Front panel: Housing: **IP 20** Terminals: IP 20

## Permissible temperatures

For specified -10...55°C

accuracy:

Warm-up time: ≤ 20 minutes Temperature effect:  $\leq 0.05\% / 10 \text{ K}$ 

Additional effect of

CJ compensation:  $\leq 0.05\% / 10 \text{ K}$ Operating limits: -20...60°C For storage: -30...70°C

## Humidity

Max. 95%, 75% yearly average, no condensation

## Shock and vibration

#### Vibration test Fc (DIN EN 60 068-2-6)

10...150 Hz Frequency: Unit in operation: 1g or 0.075 mm Unit not in 2g or 0.15 mm operation:

#### Shock test Ea (DIN EN 60 068-2-27)

Shock: 15g **Duration:** 11ms

## Electromagnetic compatibility

Complies with EN 61 326-1 for continuous, unattended operation.

Interference radiation:

• Within the limits for Class B devices. Immunity to interference: Meets the test requirements for devices in industrial areas.

#### Evaluation criteria:

- Surge interference partly has marked effects, which decay after the interference stops.
- With high levels of surge interference on 24 VAC mains leads, it is possible that the device
- With HF interference, effects up to 50 µV can occur.

## **GENERAL**

Housing front:

Material Polyamid PA 6.6 V0 (UL 94) Flammability class:

## Connecting terminals:

Material: Polyamid PA Flammability class: V2 (UL 94) for screw

terminals V0 (UL 94) for spring-clamp terminals and bus connections

## Electrical safety

Complies with EN 61 010-1: Over-voltage category II Contamination degree 2 Protection class II

**TB 45** 5

#### Electrical connections

Plug-in connector strips with choice of terminal type:

- Screw terminals for lead cross-sections from 0.2 to 2.5 mm<sup>2</sup> (AWG24-12)
- Spring-clamp terminals for lead cross-sections from 0.2 to 2.5 mm<sup>2</sup> (AWG24-12)

## Mounting method

Clip-on rail mounting (35 mm top-hat rail to EN 50 022).

Locked by means of metal catch in housing base.

Close-packed mounting possible.

Mounting position: vertical

## Weight:

0.18 kg

## **CERTIFICATIONS**

- CE certification
- Type tested to EN 14597 (replaces DIN 3440) With certified sensors applicable for:
  - Heat generating plants with outflow temperatures up to 120°C to DIN 4751
  - Hot-water plants with outflow temperatures above 110°C to DIN 4752
  - Thermal transfer plants with organic transfer media to DIN 4754
  - Oil-heated plants to DIN 4755
- cULus-certification (Type 1, indoor use)
   File: E 208286

## **ACCESSORIES**

## BlueControl® (Engineering Tool)

PC software package for configuring, parameter setting, and operating (commissioning) the TB 45. Moreover, all settings are saved and can be printed, if required.

Depending in version, a powerful data acquisition module with trend graphics is available.

## Show/hide functions

The BlueControl® software enables any number of parameters and configuration setting to be shown/hidden.

This ensures that only permitted parameters & settings can be changed in the unit. Safety-relevant parameters are not displayed.

Table 4: BlueControl<sup>®</sup>, Versions and functions:

Functionality	Mini	Basic	Expert
parameter and configuration setting	yes	yes	yes
download: writes an engineering to the device	yes	yes	yes
online-mode / visualisation	SIM only	yes	yes
creation of user defined linearizations	yes	yes	yes
configuration of extended operation level	yes	yes	yes
upload: reads an engineering from the device	SIM only	yes	yes
basic diagnosis function	no	no	yes
saves files and engineering data	no	yes	yes
printer function	no	yes	yes
online documentation / help system	yes	yes	yes
measurement correction (calibration procedure)	yes	yes	yes
data acquisition and trend function	SIM only	yes	yes
personal assistant function	yes	yes	yes

The built-in simulation serves to test the settings. Software requirements: Windows 95/98/NT/2000/XP

Configuration settings that can only be made via the BlueControl software (not via the unit's front keys):

- Customer-specific linearization
- Setting the limits for operating hours and switching cycles

Fig. 4: Hiding of interface parameters, only address visible


Name	Description	Visible
othr	Other	✓
bAud	baudrate	
Addr	address	✓
PrtY	parity	
dELY	answer delay [ms]	
D.Unt	display unit	V
02	parameter unit for O2	✓
Unit	unit	✓
d₽	decimal points	✓
SEGm	display segment assignment	✓
C.dEL	modem delay [ms]	✓

- Switch-over to 60 Hz mains frequency
- Blocking operator functions, Operating Levels, and password definition
- Text inputs
- Definition of the display contents

## Hardware requirements:

A special PC adapter (see 'Additional Accessories') is required for connecting to the unit.

Updates and demo software from: www.pma-online.de

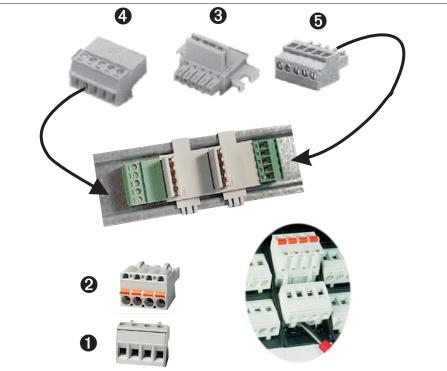

# **ACCESSORIES**

Description		Orderl-No.
Connector set with screw terminals	4 pcs.	9407-998-07101
② Connector set with spring-clamp terminals	4 pcs.	9407-998-07111
3 Bus connector for fitting in top-hat rail	1 pcs.	9407-998-07121
<ul> <li>Plug for bus connection, connections at left, horizontal cable entry</li> </ul>	1 pcs.	9407-998-07131
<ul> <li>Plug for bus connection, connections at right, vertical cable entry</li> </ul>	1 pcs.	9407-998-07141

# ADDITIONAL ACCESSORIES

Description		Order-no.
PC adapter for the BluePort® front interface		9407-998-00001
USB serial adaptor (USB to RS 232)		9407-998-00081
Converter RS 232 to RS 422/485	galv. isolated	ADAM-4520-D
BlueControl® Mini		www.pma-online.de
BlueControl® with Basic license rail line		9407-999-12001
BlueControl® with Expert license rail line		9407-999-12011

## **ORDERING INFORMATION**

Temperature limiter TB 45 TB 4 5 - 1	-	-	0	0-	00
1 universal input, 1 digital input with display and BluePort® interface			1		
without plug-in connector terminals with screw terminal connector 90260V AC, 2 relays 1830VAC/1831VDC, 2 relays 90260V AC, mA/V/logic + 2 relays 1830VAC/1831VDC, mA/V/logic +2 relays	0 1 0 1 2 3				
without options RS 485 / MODBUS - protocol System interface (only for 24V versions)		0 1 2			
di1 as contact input di1 as optocoupler input INP2 als universal input, O <sub>2</sub> -measurement, di1 as contact input INP2 als universal input, O <sub>2</sub> -measurement, di1 as optocoupler input		0 1 2			
Standard configuration Customer-specific configuration			0 9		
Standard (CE-certification) cULus certified EN 14597 certified (replaces DIN 3440)				( (	J

## SYSTEM COMPONENTS

Fieldbus coupler PROFIBUS DP RL40-112-00000-000 Fieldbus coupler PROFIBUS DP, RL40-112-00000-U00 cULus certified

RL40-119-00000-000 Power supply module Power supply module RL40-119-00000-U00 cULus certified

## Standard accessories

- Operating notes
- Devices with 'Interface' option: bus connector for fitting into top-hat rail
- ➤ Please also order the associated documentation (as separate item):

## **DOCUMENTATION**

Description	Order-no.
Operating instructions TB 45 (E)	9499-040-71911
Interface description for Modbus rail line (E)	9499-040-72011
Interface description PROFIBUS-DP (E)	9499-040-77111
Data sheet system components rail line (E)	9498-737-50913



## Germany

Prozeß- und Maschinen-Automation GmbH Miramstraße 87, D-34123 Kassel Tel.: +49 561 505 - 1307

Fax: +49 561 505 - 1661 E-mail: export@pma-online.de Internet: http://www.pma-online.de

## Your local distributor