

Interface Terminal Block

AFS Series  
INSTRUCTION MANUAL

TCD210097AB

Autonics

Thank you for choosing our Autonics product.

**Read and understand the instruction manual and manual thoroughly before using the product.**

**For your safety, read and follow the below safety considerations before using.**

**For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.**

Keep this instruction manual in a place where you can find easily.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Follow Autonics website for the latest information.

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ⚠ symbol indicates caution due to special circumstances in which hazards may occur.

⚠ Warning

Failure to follow instructions may result in serious injury or death.

01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)  
Failure to follow this instruction may result in personal injury, economic loss or fire.
02. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.  
Failure to follow this instruction may result in explosion or fire.
03. Do not connect, repair, or inspect the unit, or remove connector while connected to a power source.  
Failure to follow this instruction may result in fire or electric shock.
04. Do not disassemble or modify the unit.  
Failure to follow this instruction may result in fire or electric shock.

⚠ Caution

Failure to follow instructions may result in injury or product damage.

01. Use the unit within the rated specifications.  
Failure to follow this instruction may result in fire or product damage.
02. Use dry cloth to clean the unit, and do not use water or organic solvent.  
Failure to follow this instruction may result in fire or electric shock.
03. Keep the product away from metal chip, dust, and wire residue which flow into the unit.  
Failure to follow this instruction may result in fire or product damage.
04. Do not use the product when a screw of terminal is loosened.  
Failure to follow this instruction may result in fire or product damage.

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- Keep away from high voltage lines or power lines to prevent inductive noise.  
In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.  
Do not use near the equipment which generates strong magnetic force or high frequency noise.
- This unit may be used in the following environments.
  - Indoors (in the environment condition rated in 'Specifications')
  - Altitude max. 2,000 m
  - Pollution degree 2
  - Installation category II

Ordering Information

This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.

AFS - ① ② ③

① Connector type	③ Number of connector
H: Hirose connector	20: 20-pin
	26: 26-pin
② Terminal block arrangement	40: 40-pin
No-mark: Single line	50: 50-pin
B: Double line	

Product Components

- Product
- Instruction manual

Sold Separately

- 7 mm jumper bar (4-pin: JB-7-04, 10-pin: JB-7-10)
- I/O cable CH/CO Series

Specifications					
Model	AFS-H20	AFS-H26	AFS-H40	AFS-HB40	AFS-H50
No. of connector pins	20	26	40	40	50
No. of terminal points	20	26	40	40	50
Terminal type	Screw	Screw	Screw	Screw	Screw
Terminal block arrangement	Single line	Single line	Single line	Double line	Single line
Terminal pitch	7.0 mm	7.1 mm	7.0 mm	7.2 mm	7.0 mm
Connector for controller side	20-pin Hirose (HIF3BA-20PA-2.54DSA)	26-pin Omron (XG4A-2631)	40-pin Hirose (HIF3BA-40PA-2.54DSA)	40-pin Omron (XG4A-4031)	50-pin Hirose (HIF3BA-50PA-2.54DSA)
Material	Case, Base: MPPO, terminal: brass	Case, Base: PC, terminal: brass	Case, Base: MPPO, terminal: brass	Case, Base: PC, terminal: brass	Case, Base: MPPO, terminal: brass
Approval	CE UK ENEC	CE UK ENEC	CE UK ENEC	CE UK ENEC	CE UK ENEC
Unit weight (packaged)	≈ 71 g (≈ 103 g)	≈ 93 g (≈ 133 g)	≈ 133 g (≈ 175 g)	≈ 142 g (≈ 194 g)	≈ 163 g (≈ 211 g)


Rated voltage <sup>01)</sup>	≤ 125 VDC≡, 125 VAC~ 50/60 Hz
Rated current	≤ 1 A
Insulation resistance	≥ 1,000 MΩ (500 VDC≡ megger)
Dielectric strength	2,700 VAC~ 50/60 Hz for 1 minute
Vibration	0.75 mm amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 2 hours
Vibration (malfunction)	0.75 mm amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 10 minutes
Shock	150 m/s² (≈ 15 G) in each X, Y, Z direction for 3 times
Shock (malfunction)	100 m/s² (≈ 10 G) in each X, Y, Z direction for 3 times
Ambient temperature	-15 to 55 °C, storage: -25 to 65 °C (no freezing or condensation)
Ambient humidity	35 to 85 %RH, storage: 35 to 85 %RH (no freezing or condensation)
Protection structure	IP20 (IEC standard)

01) When connecting loads to output part, connect loads of same power type. Connecting loads of different power type may cause safety issues.

Applicable wire - solid	Ø 0.3 to 1.2 mm
Applicable wire - stranded	AWG 22-16 (0.30 to 1.25 mm²)
Crimp terminal connection tensile strength	≥ 30 N
Tightening torque	0.5 to 0.6 N·m

Crimp Terminal Specifications


- Unit: mm, Use the UL approved crimp terminal.

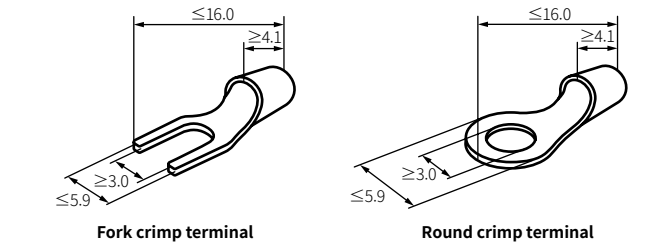


Dimensions

- Unit: mm, For the detailed dimensions of the product, follow the Autonics web site.

■ Single line

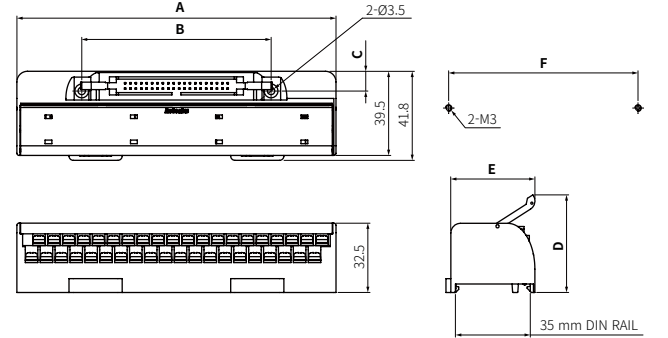


	A	B	C	D	E	F
20-pin	80	62.5	9.3	45.8	39.6	62.5
26-pin	102	81	9.3	52.8	29.7	81
40-pin	150	89	9.3	45.8	39.7	89
50-pin	184	104	8.8	45.8	39.7	104

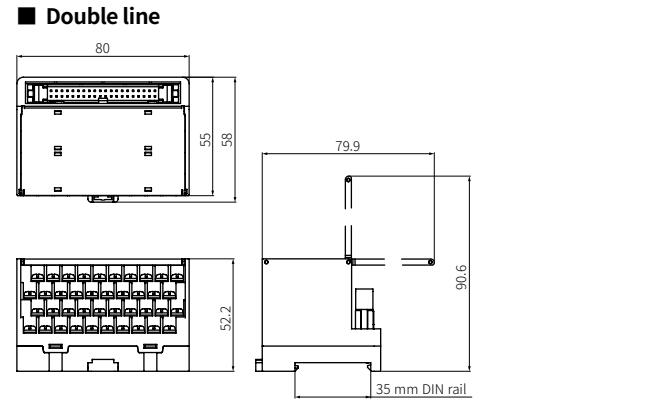

Installation

- DIN RAIL
- Mounting
- Pull the Rail lock on the rear of the product to the direction ①.
  - Hang DIN rail hook on the rear of the product onto DIN rail.
  - Push the product to the direction ②, and push the Rail lock to the direction ③ to fix onto the DIN rail.
- The diagram illustrates the three steps for mounting the terminal block on a DIN rail. Step 1: Pulling the rail lock to the left. Step 2: Hanging the DIN rail hook onto the rail. Step 3: Pushing the product to the right and locking the rail lock.
- Removing
- Insert a tool such as screwdriver into the hole of Rail lock.
  - Push the tool to the direction ① and pull the Rail lock.
  - Lift bottom of the product to the direction ② and remove the product from DIN rail.

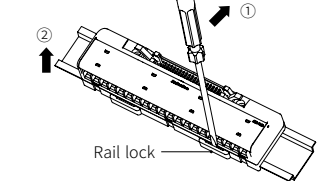

■ Panel

Product with the mounting hole can be installed on panel with screw.

It is recommended to use M3 × 30 mm of spring washer screws.

If you use flat washer, its diameter should be Ø 6 mm.

Tighten the screw with the tightening torque of 0.5 to 0.7 N·m.

The diagram shows the terminal block mounted on a panel. A screw is inserted through the mounting hole in the panel and the terminal block, secured with a washer.

Wire Connection

■ Wire connection

- Single line

The diagram shows the single line wire connection for four models: AFS-H50, AFS-H40, AFS-H26, and AFS-H20. It illustrates the controller side (connector) and the terminal side. The controller side shows pins 1 through 20 for AFS-H20, 1 through 26 for AFS-H26, 1 through 40 for AFS-H40, and 1 through 50 for AFS-H50. The terminal side shows the corresponding terminal numbers (A1-A20, B1-B20, etc.).

- Double line

The diagram shows the double line wire connection for the same four models. It illustrates the controller side (connector) and the terminal side. The controller side shows pins 1 through 20 for AFS-H20, 1 through 26 for AFS-H26, 1 through 40 for AFS-H40, and 1 through 50 for AFS-H50. The terminal side shows the corresponding terminal numbers (A1-A20, B1-B20, etc.).

■ Hirose connector pin arrangement

- 20-pin connector

Hirose (HIF3BA-20PA-2.54DSA)

Diagram of the Hirose 20-pin connector pin arrangement. The pins are numbered 1 through 20. The diagram shows the pin 1 position and the overall pin layout.

- 26-pin connector

Omron (XG4A-2631)

Diagram of the Omron 26-pin connector pin arrangement. The pins are numbered 1 through 26. The diagram shows the pin 1 position and the overall pin layout.

- 40-pin connector

Hirose (HIF3BA-40PA-2.54DSA)

Diagram of the Hirose 40-pin connector pin arrangement. The pins are numbered 1 through 40. The diagram shows the pin 1 position and the overall pin layout.

- 40-pin connector

Omron (XG4A-4031)

Diagram of the Omron 40-pin connector pin arrangement. The pins are numbered 1 through 40. The diagram shows the pin 1 position and the overall pin layout.

- 50-pin connector

Hirose (HIF3BA-50PA-2.54DSA)

Diagram of the Hirose 50-pin connector pin arrangement. The pins are numbered 1 through 50. The diagram shows the pin 1 position and the overall pin layout.